

ПРЕДГОВОР

This manual should be considered as a permanent part of the vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new SUZUKI vehicle and review the manual from time to time. It contains important information on safety, operation and maintenance.

SUZUKI MOTOR CORPORATION

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. SUZUKI MOTOR CORPORATION reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

ЗАБЕЛЕШКА:

Please see the warning label named "Air bag symbol meaning" in "BEFORE DRIVING" section for information on front air bag protection.

ВАЖНО

▲ ПРЕДУПРЕДУВАЊЕ/ ВНИМАНИЕ/ ИЗВЕСТУВАЊЕ/ЗАБЕЛЕШКА

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol ▲ and the words ПРЕДУПРЕДУВАЊЕ, ВНИМАНИЕ, ИЗВЕСТУВАЊЕ and ЗАБЕЛЕШКА have special meanings. Pay particular attention to messages high-lighted by these signal words:

▲ ПРЕДУПРЕДУВАЊЕ

Indicates a potential hazard that could result in death or serious injury.

▲ ВНИМАНИЕ


Indicates a potential hazard that could result in minor or moderate injury.

ИЗВЕСТУВАЊЕ

Indicates a potential hazard that could result in vehicle damage.

ЗАБЕЛЕШКА:

Indicates special information to make maintenance easier or instructions clearer.

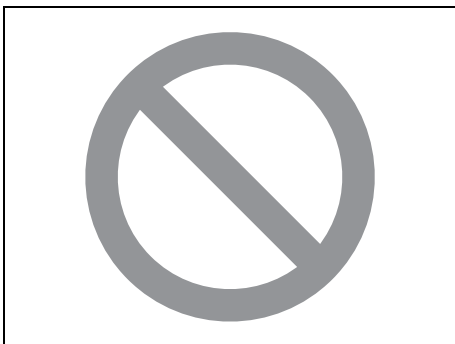

75F135

The circle with a slash in this manual means “Do not do this” or “Do not let this happen”.

MODIFICATION WARNING



ПРЕДУПРЕДУВАЊЕ

Do not modify this vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranty.

ЗАБЕЛЕШКА:

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

ИЗВЕСТУВАЊЕ

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult an authorized SUZUKI dealer or qualified service technician for advice.

INTRODUCTION

Thank you for choosing SUZUKI product and welcome to our growing family. Your choice was a wise one; SUZUKI products have great value that will give you driving pleasure for years.

This owner's manual was prepared to give you a safe, enjoyable, and trouble-free experience with your SUZUKI vehicle. In this manual, you will learn about the vehicle's operation, its safety features and maintenance requirements. Please read the manual carefully before operating your vehicle. Afterwards, keep this manual in the glove box for further reference.

Should you resell the vehicle, please leave this manual with it for the next owner.

In addition to the owner's manual, the other booklets provided with your SUZUKI vehicle explain the vehicle's warranties. We recommend you read them as well to familiarize yourself with this important information.

When planning the regular scheduled maintenance of your SUZUKI vehicle, we recommend you visit your local SUZUKI dealer. Their factory-trained technicians will provide the best possible service and use only genuine SUZUKI parts and accessories or their equivalents.

ЗАБЕЛЕШКА:

"Suzuki dealer" means an Authorized Suzuki dealer and an Authorized Suzuki Service Workshop.

SUZUKI MOTOR CORPORATION

52RM0-01E

RECOMMENDATION OF GENUINE SUZUKI PARTS AND ACCESSORIES USE

SUZUKI strongly recommends the use of genuine SUZUKI parts* and accessories. Genuine SUZUKI parts and accessories are built to the highest standards of quality and performance, and are designed to fit your vehicle's exact specifications.

A wide variety of non-genuine replacement parts and accessories for SUZUKI vehicles are currently available in the market. Using these parts and accessories can affect the vehicle performance and shorten its useful life. Therefore, installation of non-genuine SUZUKI parts and accessories is not covered under warranty.

Non-genuine SUZUKI parts and accessories

Some parts and accessories may be approved by certain authorities in your country.

Some parts and accessories are sold as SUZUKI-authorized replacement parts and accessories. Some genuine SUZUKI parts and accessories are sold as re-use parts and accessories. These parts and accessories are non-genuine SUZUKI parts and accessories and use of these parts is not covered under warranty.

Re-use of genuine SUZUKI parts and accessories

The resale or re-use of the following items which could cause hazards for users is expressly forbidden:


- Air bag components and all other pyrotechnic items, including their components (e.g. cushion, control devices and sensors)
- Seat belt system, including their components (e.g. webbing, buckles and retractors)

The air bag and seat belt pretensioner components contain explosive chemicals. These components should be removed and disposed of properly by SUZUKI-authorized service shop or scrap yard to avoid unintended explosion before scrapping.

*The parts remanufactured under SUZUKI's approval can be used as genuine SUZUKI parts in Europe.

SERVICE STATION GUIDE

1. Engine hood release handle
(see section 5)
2. Engine coolant (see section 7)
3. Windshield washer fluid
(see section 7)
4. Engine oil dipstick <Yellow>
(see section 7)
5. CVT fluid dipstick <Orange>
(see section 7)
6. Lead-acid battery (see section 7)
7. Fuel lid release lever
(see section 1 / see section 5)
8. Tire pressure (see tire information
label on driver's door lock pillar)
9. Tire/wheel replacement tools
(see section 8)
10. Flat tire repair kit (see section 8)

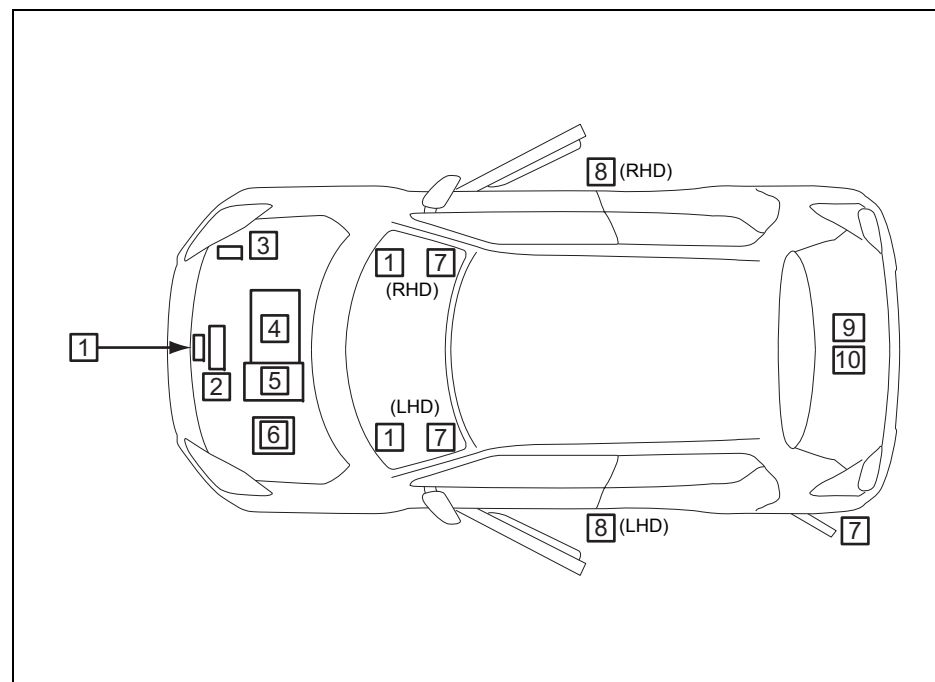

52RM00002

LHD: Left Hand Drive
RHD: Right Hand Drive

MEMO

TABLE OF CONTENTS


FUEL RECOMMENDATION	1
BEFORE DRIVING	2
OPERATING YOUR VEHICLE	3
DRIVING TIPS	4
OTHER CONTROLS AND EQUIPMENT	5
VEHICLE LOADING AND TOWING	6
INSPECTION AND MAINTENANCE	7
EMERGENCY SERVICE	8
APPEARANCE CARE	9
GENERAL INFORMATION	10
SPECIFICATIONS	11
INDEX	12

ILLUSTRATED TABLE OF CONTENTS

EXTERIOR, FRONT

ПРИМЕР

1. Engine hood (P.5-2)
2. Windshield wipers (P.2-147)
3. Dual sensor (if equipped) (P.3-68)
4. Radar sensor (if equipped) (P.3-39, 3-52)
5. Frame (towing) hook (P.5-11)
6. Position lights & Daytime running lights (D.R.L.) (if equipped) (P.2-133, 2-136)
7. Front fog lights (if equipped) (P.2-138, 7-41)/
Daytime running lights (D.R.L.) (if equipped) (P.2-136, 7-42)
8. Headlights (P.2-133, 7-39)
9. Outside rearview mirrors (P.2-20)
10. Door locks (P.2-2)

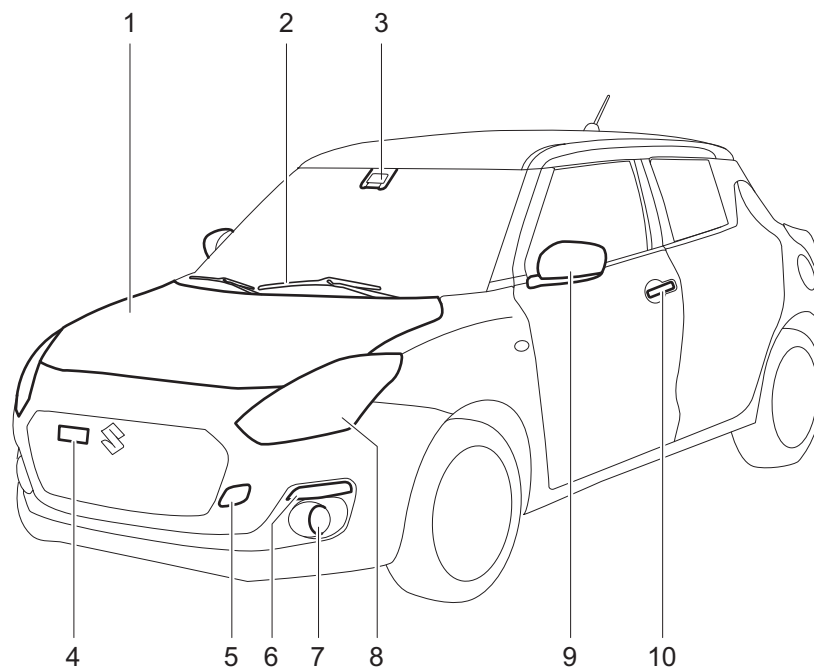

52RM00010


52RM0-01E

ILLUSTRATED TABLE OF CONTENTS

EXTERIOR, REAR

1. Radio antenna (P.5-31)
2. High-mount stop light (P.11-4)
3. Rear window wiper (P.2-149)
4. Rearview camera (if equipped) (P.3-88)
5. Fuel filler cap (P.5-1)
6. Rear combination lights (P.7-42)
7. Tailgate (P.2-5)
8. Rear fog light (P.2-138, 7-44)
9. License plate lights (P.7-44)

ПРИМЕР

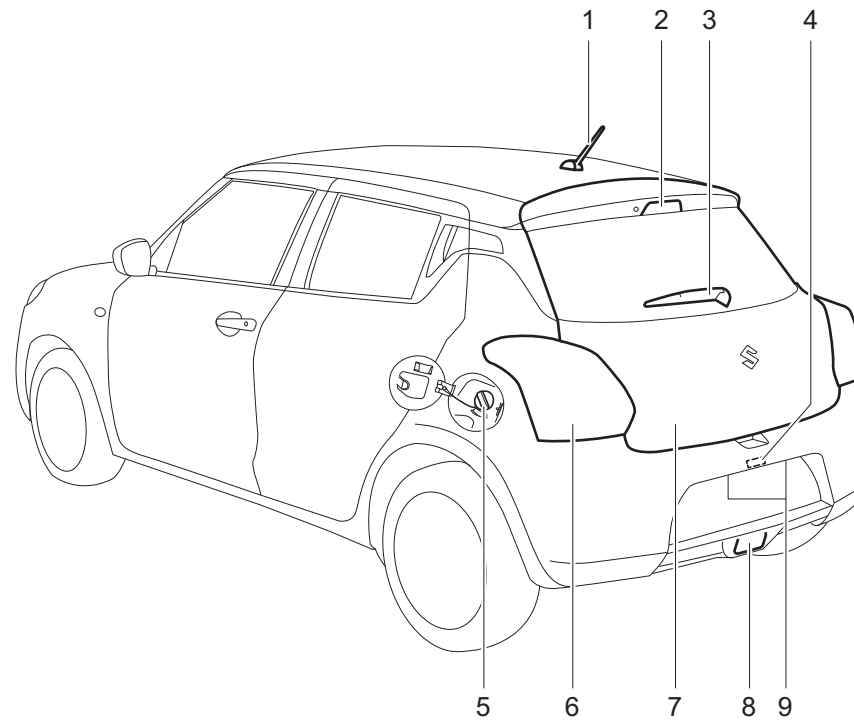


52RM00020

ILLUSTRATED TABLE OF CONTENTS

INTERIOR, FRONT

1. Power window controls (P.2-17)/
Remote mirror control
switch (if equipped) (P.2-21)/
Outside rearview mirror folding switch
(if equipped) (P.2-21)
2. Front passenger's front air bag
(P.2-50)
3. Front seats (P.2-22)
4. Side air bags (P.2-54)
5. Parking brake lever (P.3-10)
6. Front seat heater switches
(if equipped) (P.2-24)
7. Glove box (P.5-7)

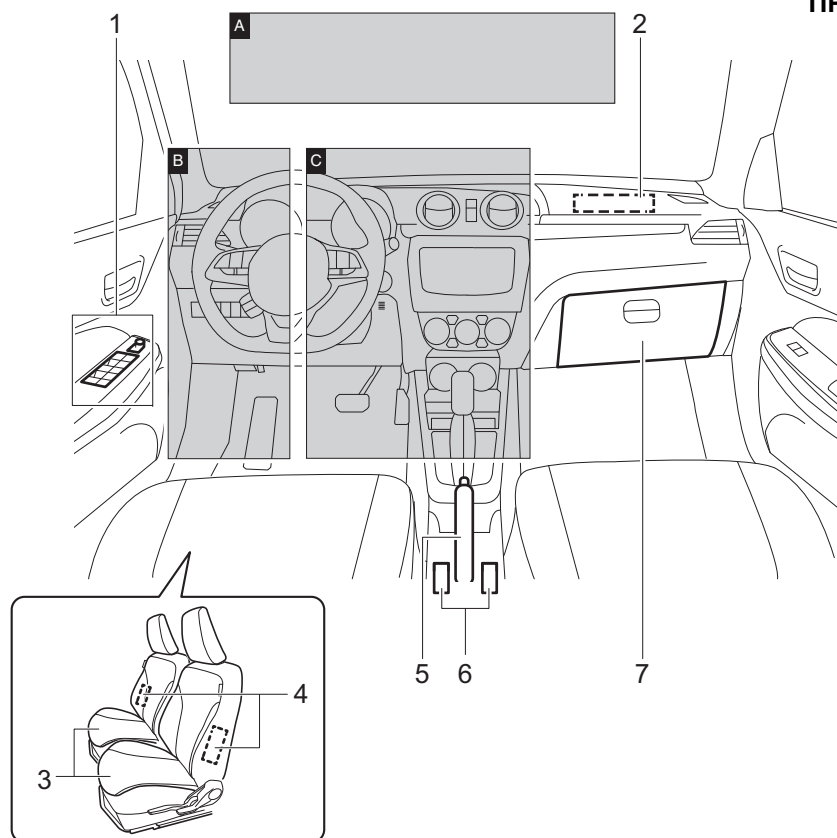

ПРИМЕР


52RM00030

ILLUSTRATED TABLE OF CONTENTS

1. Sun visor (P.5-4)
2. Front interior light (P.5-5, 7-45)
3. Hands-free microphone (if equipped)
(P.5-65)
4. Inside rearview mirror (P.2-20)

VIEW A (Left hand drive vehicle)

ПРИМЕР

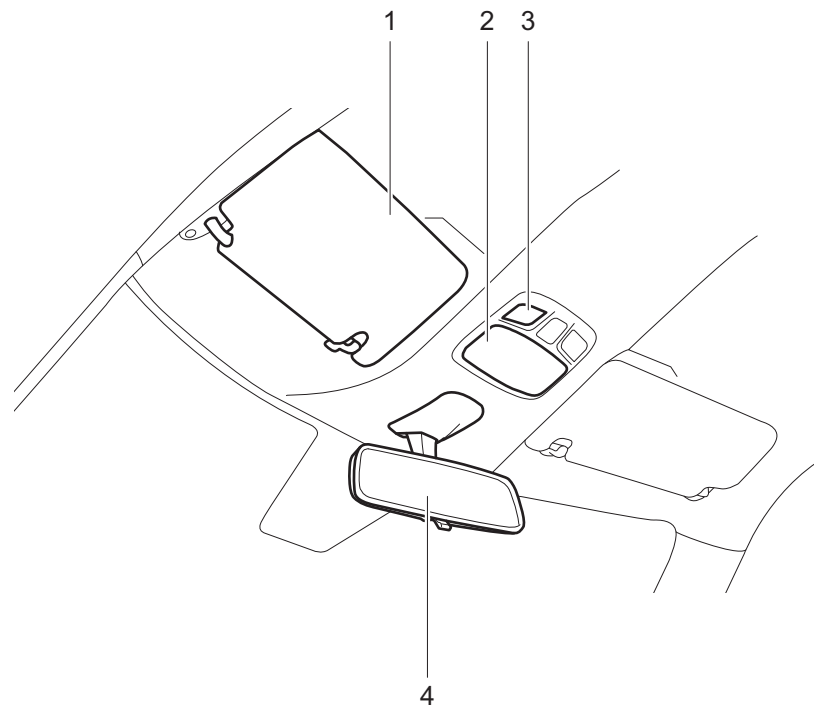


52RM00040

ILLUSTRATED TABLE OF CONTENTS

1. Fuses (P.7-34)
2. Lighting control lever (P.2-133)/
Turn signal control lever (P.2-145)/
Front fog light switch (if equipped)
(P.2-138)/
Rear fog light switch (P.2-138)
3. Remote audio controls (if equipped)
(P.5-77)
4. Driver's front air bag (P.2-50)
5. Shift paddles (if equipped) (P.3-20)
6. Adaptive cruise control switches
(if equipped) (P.3-39)/
Speed limiter switches (if equipped)
(P.3-51)
7. Headlight leveling switch (if equipped)
(P.2-145))
8. Lane departure warning OFF switch
(if equipped) (P.3-79)
9. Radar brake support OFF switch
(if equipped) (P.3-62)/
Dual sensor brake support OFF
switch (if equipped) (P.3-78)
10. "ENG A-STOP OFF" switch (if
equipped) (P.3-36)
11. ESP[®] OFF switch (P.3-95)
12. Engine hood release handle (P.5-2)
13. Fuel lid release lever (P.5-1)
14. Tilt/telescoping (if equipped) steering
column lock lever (P.2-149)
15. Hands-free switches (if equipped)
(P.5-65)

VIEW B

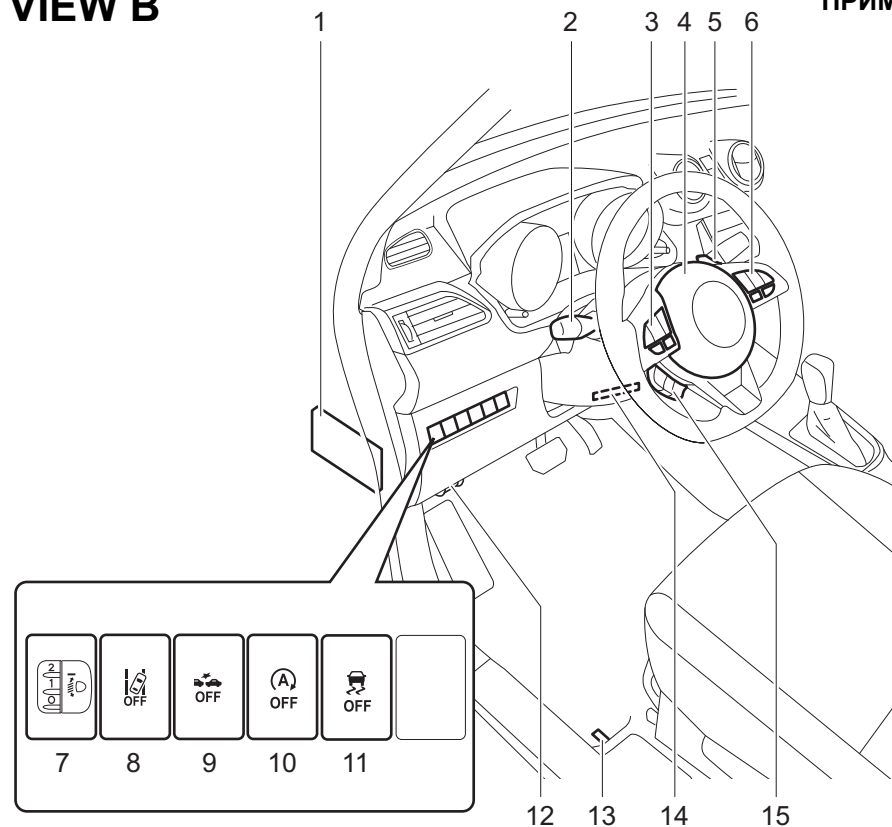


52RM00050

ILLUSTRATED TABLE OF CONTENTS

1. Instrument cluster
(P.2-62, 2-73, 2-90)/
Information display
(P.2-64, 2-76, 2-94)
2. Windshield wiper and washer lever
(P.2-147)/
Rear window wiper/
washer switch (P.2-149)
3. Audio (if equipped) (P.5-33)
4. Hazard warning switch (P.2-147)
5. Front passenger air bag deactivation
indicator (P.2-60)/
Theft deterrent light (P.2-16)
6. Ignition switch (vehicle without
keyless push start system) (P.3-3)
7. Engine switch (vehicle with keyless
push start system) (P.3-5)
8. Gearshift lever (P.3-17)
9. AUX/USB socket (if equipped) (P.5-7)
10. Accessory socket (P.5-6)
11. Heating and air conditioning
system (P.5-14)/
Heated rear window switch / heated
outside rearview mirrors switch
(if equipped) (P.2-150)

VIEW C

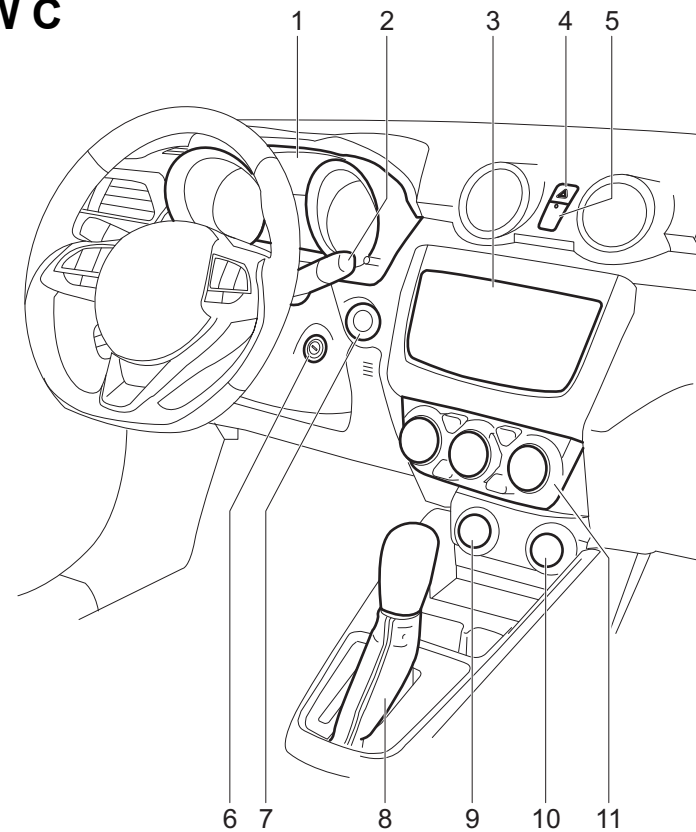

ПРИМЕР


52RM00060

ILLUSTRATED TABLE OF CONTENTS

INTERIOR, REAR

1. Seat belts (P.2-28)
2. Assist grips (if equipped) (P.5-7)
3. Side curtain air bags (P.2-54)
4. Rear seats (P.2-25)

ПРИМЕР

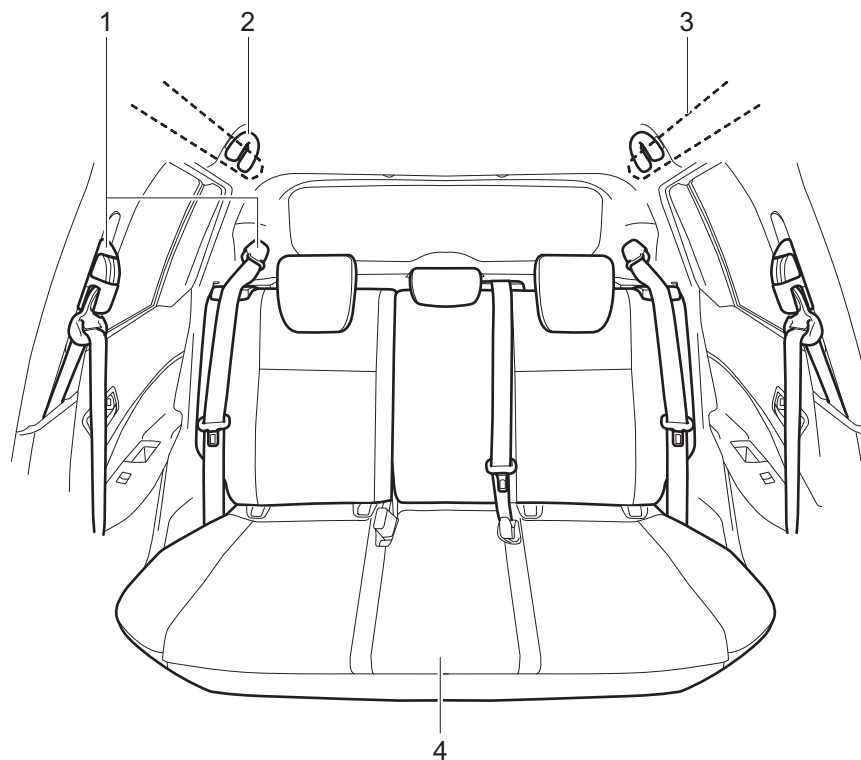



52RM00070

ILLUSTRATED TABLE OF CONTENTS

LUGGAGE COMPARTMENT

1. Luggage compartment cover
(if equipped) (P.5-11)
2. Luggage compartment light
(if equipped) (P.5-5, 7-45)
3. Luggage compartment hook (P.5-10)
4. Jack handle (P.8-1)
5. Towing hook (P.5-11)
6. Wheel wrench (P.8-1)
7. Flat tire repair kit (P.8-6)
8. Jack (if equipped) (P.8-1)
9. Spare tire (if equipped) (P.7-31, 8-1)

ПРИМЕР

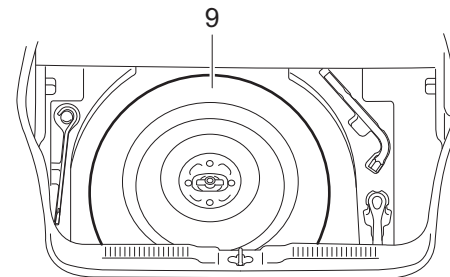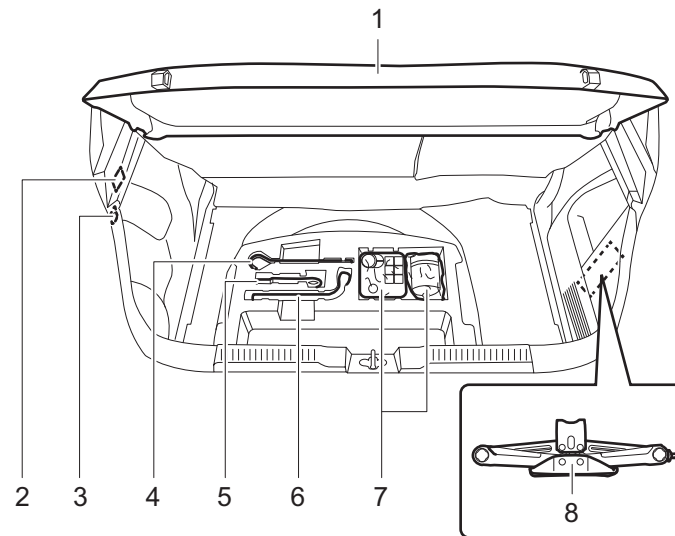

52RM00080


ILLUSTRATED TABLE OF CONTENTS

MEMO

FUEL RECOMMENDATION

1


Fuel recommendation 1-1

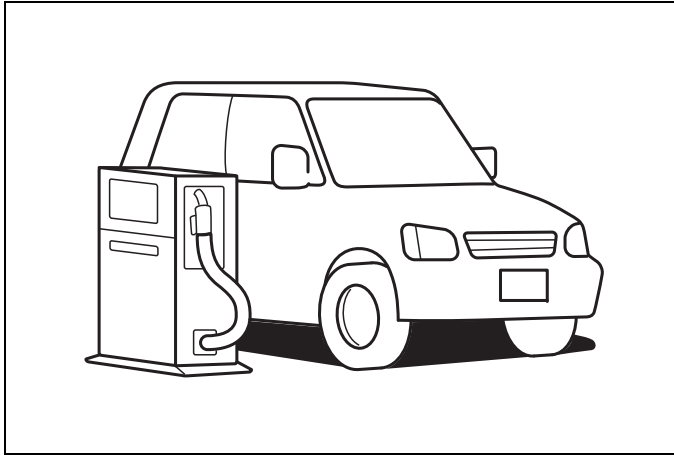

65D394

FUEL RECOMMENDATION

Fuel recommendation

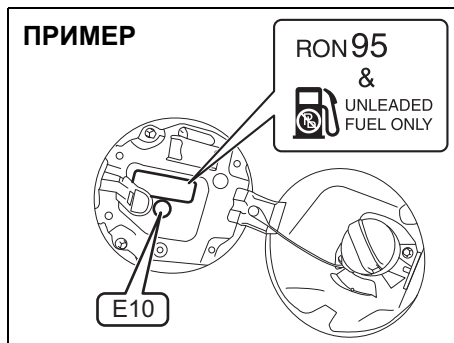

52RM10010

To avoid damaging catalytic converter, you **must** use unleaded gasoline with an octane number (RON) of 91 or higher (or 95 or higher if it is stated on the fuel filler lid), which complies with the European standard EN228. This is identified by a label attached on fuel lid that states: "UNLEADED FUEL ONLY", "NUR UNVERBLEITES BENZIN", "ENDAST BLYFRI BENSIN" or "SOLO GASOLINA SIN PLOMO".

If a "RON 95" label is attached, you must use unleaded gasoline with an octane number (RON) of 95 or higher.

Gasoline-ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in certain areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol (E10). Check that this gasoline-ethanol blend has octane ratings no lower than those recommended for the gasoline.

ЗАБЕЛЕШКА:


If you are not satisfied with the driveability or fuel economy of your vehicle when you use a gasoline-alcohol blend, you should switch back to unleaded gasoline containing no alcohol.

ИЗВЕСТУВАЊЕ

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.

ИЗВЕСТУВАЊЕ

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

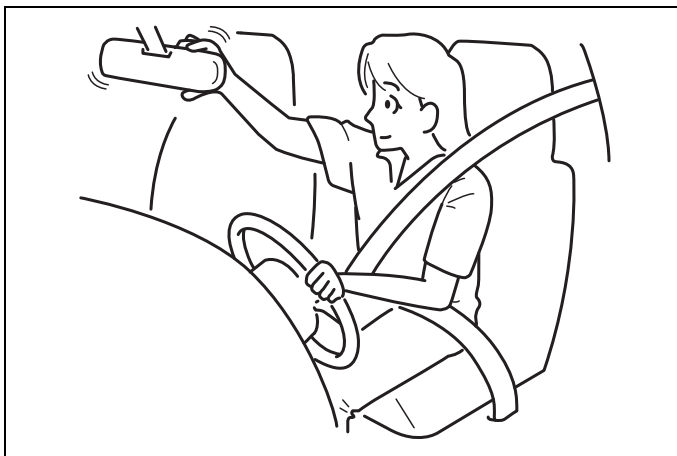

60G404

Keys	2-1
Door locks	2-2
Keyless push start system remote controller /	
Keyless entry system transmitter (if equipped)	2-7
Theft deterrent light	2-16
Windows	2-16
Mirrors	2-20
Front seats	2-22
Rear seats	2-25
Seat belts and child restraint systems	2-28
Child restraint system for countries applied for UN	
Regulation No.16	2-38


BEFORE DRIVING

Supplemental restraint system (air bags)	2-49
Instrument cluster (Type A) (if equipped)	2-62
Speedometer	2-63
Tachometer	2-63
Fuel gauge	2-63
Brightness control	2-64
Information display	2-64
Instrument cluster (Type B) (if equipped)	2-73
Speedometer	2-74
Tachometer	2-74
Fuel gauge	2-74
Temperature gauge	2-75
Brightness control	2-75
Information display	2-76
Instrument cluster (Type C) (if equipped)	2-90
Speedometer	2-91
Tachometer	2-91
Fuel gauge	2-91
Temperature gauge	2-92
Brightness control	2-92
Information switch (if equipped)	2-93
Information display	2-94
Warning and indicator lights	2-118
Lighting control lever	2-133
Headlight leveling switch (if equipped)	2-145
Turn signal control lever	2-145
Hazard warning switch	2-147
Windshield wiper and washer lever	2-147
Tilt/telescoping (if equipped) steering lock lever	2-149
Horn	2-150
Heated rear window switch /	
heated outside rearview mirror switch (if equipped)	2-150

BEFORE DRIVING

Keys

ПРИМЕР

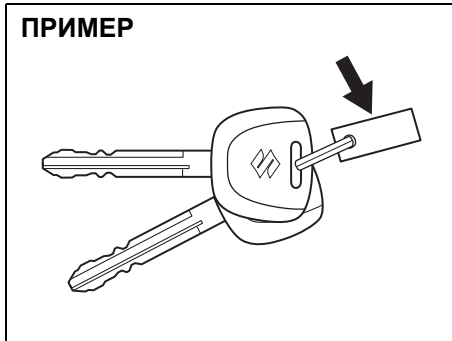

54G489

Your vehicle comes with a pair of identical keys. Keep one of the keys as a spare key in a safe place. One key can open all of the locks on the vehicle.


The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer system

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key or keyless push start system remote controller, which has an electronic identification code programmed in it. The key or remote controller communicates the identification code to the vehicle when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to "ON". If you need to make spare keys or remote controllers, see an authorized SUZUKI dealer. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.

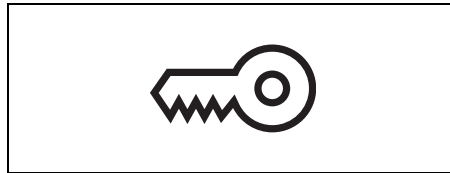

80JM122

If the immobilizer/keyless push start system warning light blinks when the ignition switch is in "ON" position or the ignition mode is "ON", the engine will not start.

ЗАБЕЛЕШКА:

If the immobilizer/keyless push start system warning light blinks or comes on, a message may be shown on the information display.

For vehicles without a keyless push start system

If this light blinks, turn the ignition switch to "LOCK" position, and then turn it back to "ON" position.

If the light still blinks after the ignition switch is turned back to "ON" position, there may be something wrong with your key or with the immobilizer system. Ask an authorized SUZUKI dealer to have the system inspected.

For vehicles with a keyless push start system

If this light blinks, change the ignition mode to "LOCK" (OFF), and then change it back to "ON". Also refer to "If the master warning indicator light blinks and the engine cannot be started" in "Starting engine (vehicle with keyless push start system) (if equipped)" in "OPERATING YOUR VEHICLE" section.

If the light still blinks after the ignition mode is changed back to "ON", there may be something wrong with your key or with the immobilizer system. Ask an authorized SUZUKI dealer to have the system inspected.

BEFORE DRIVING

The immobilizer/keyless push start system warning light may also blink if the remote controller is not in the vehicle when you close the door or attempt to start the engine.

ЗАБЕЛЕШКА:

- If you lose your immobilizer ignition key or remote controller, ask an authorized SUZUKI dealer as soon as possible to deactivate the lost one, and to make a new key or remote controller.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch or the engine switch when using your SUZUKI vehicle. Otherwise, or the engine may not be started because they may interfere with your SUZUKI vehicle's immobilizer system.
- If you attach any metal objects to the immobilizer key or remote controller, it may not start the engine.

ИЗВЕСТУВАЊЕ

The immobilizer key and remote controller are sensitive electronic instruments. To avoid damaging them:

- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep them away from magnetic objects.

This immobilizer system, model I68P0 (for vehicles without a keyless push start system) and P74P0 (for vehicles with a keyless push start system) are in compliance with the essential requirements and other provisions of Directive 1999/5/EC.


Ignition key reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition keyhole when the driver's door is opened.

Door locks

Side door locks

ПРИМЕР

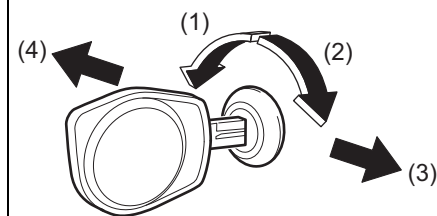

52RM20830

- (1) LOCK
- (2) UNLOCK
- (3) Rear
- (4) Front

To lock a driver's door from the outside of the vehicle:

- Insert a key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

BEFORE DRIVING

To unlock a driver's door from the outside of the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.



52RM20010

- (1) LOCK
- (2) UNLOCK


To lock a door from the inside of the vehicle, turn the lock knob forward. Turn the lock knob backward to unlock the door.

To lock a rear door from the outside of the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

ЗАБЕЛЕШКА:

Hold the door handle when you close a locked front door, or the door will not remain locked.

Central door locking system

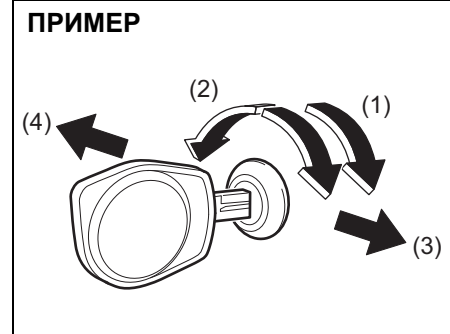

52RM20840

- (1) UNLOCK
- (2) LOCK
- (3) Rear
- (4) Front

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.


To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.

ЗАБЕЛЕШКА:

You can switch the function that unlocks all doors from requiring two turns to requiring one turn, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

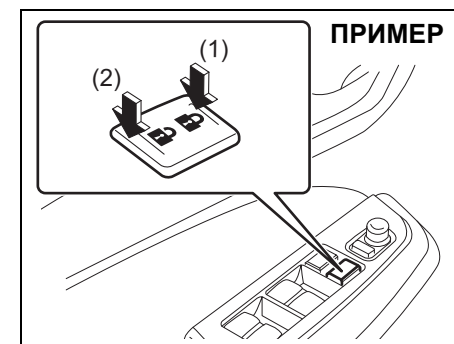

52RM20020

- (1) LOCK
- (2) UNLOCK

You can also lock or unlock all doors by pressing the front or rear of the switch, respectively.

BEFORE DRIVING

ЗАБЕЛЕШКА:

- You can also lock or unlock all doors by operating the transmitter or remote controller. Refer to “Keyless push start system remote controller / Keyless entry system transmitter (if equipped)” in this section.
- If your vehicle is equipped with the keyless push start system, you can also lock or unlock all doors by pushing the request switch. Refer to “Keyless push start system remote controller / Keyless entry system transmitter (if equipped)” in this section.

Dead lock system (if equipped)

This system is designed to help prevent tamper-unlocking of the door locks.

You can activate this system by turning the key in the driver's door lock.

ЗАБЕЛЕШКА:


- You can also activate the dead lock system by operating the transmitter or remote controller. Refer to “Keyless push start system remote controller / Keyless entry system transmitter” in this section.
- If your vehicle is equipped with the keyless push start system, you can also activate the dead lock system by pushing the request switch. Refer to “Keyless push start system remote controller / Keyless entry system transmitter (if equipped)” in this section.

⚠ ПРЕДУПРЕДУВАЊЕ

Do not activate the dead lock system if there are occupants in the vehicle. They will be locked in the vehicle and unable to unlock the doors from inside.

ЗАБЕЛЕШКА:

- The dead lock system will not operate if one or more door(s) is (are) not closed and latched completely. Check that all doors (including the tailgate) are completely closed and latched when activating the dead lock system.
- The dead lock system is released automatically, allowing all the side doors to be unlocked when the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to “ON”.

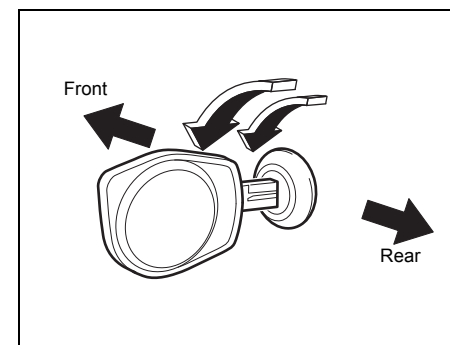


52RM20850

To activate this system:

Insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle twice within 3 seconds.

You cannot use the lock knobs to unlock the side doors when this system is activated.

BEFORE DRIVING

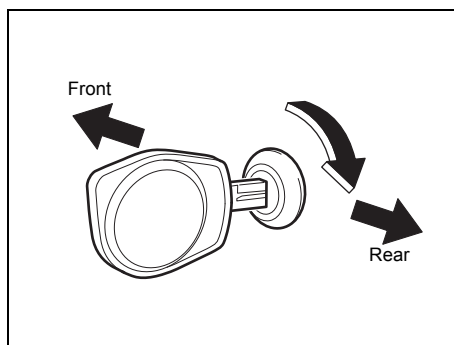

52RM20860


To cancel this system:

To unlock the driver's door, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle once.

ЗАБЕЛЕШКА:

You can switch the function that unlocks all doors from requiring two turns to requiring one turn, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

Child-proof locks (rear door)

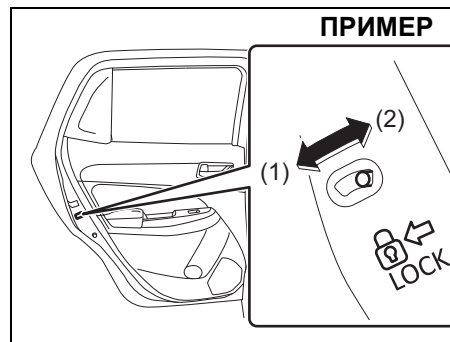

52RM20030

- (1) LOCK
- (2) UNLOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in LOCK position (1), the rear door can only be opened from outside. When the lock lever is in UNLOCK position (2), the rear door can be opened from inside or outside.

⚠ ПРЕДУПРЕДУВАЊЕ


Place the child-proof lock in **LOCK** position whenever children are seated in the rear.

Tailgate

⚠ ПРЕДУПРЕДУВАЊЕ

Always check that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

Type1

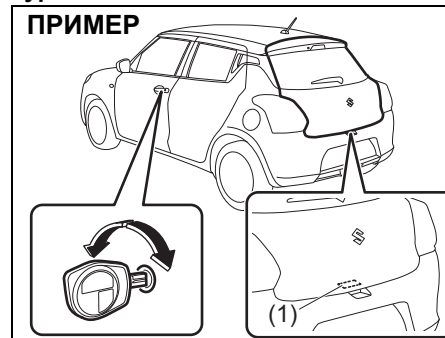

52RM20040

- (1) Tailgate unlatch switch

You can lock and unlock the tailgate by using the key in the driver's door lock.

To open the tailgate, push and hold the tailgate unlatch switch (1) and lift the tailgate.

BEFORE DRIVING


ЗАБЕЛЕШКА:

When the tailgate is closed incompletely, follow the procedure below:

- 1) Push the tailgate unlatch switch (1) and open the tailgate.
- 2) After a few seconds, close the tailgate.
- 3) Check that the tailgate is closed completely.

If you cannot unlock the tailgate by using the key in the driver's door lock due to a discharged lead-acid battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.

- 1) Fold the rear seat forward for easier access. Refer to "Folding rear seats" section for details on how to fold the rear seat forward.

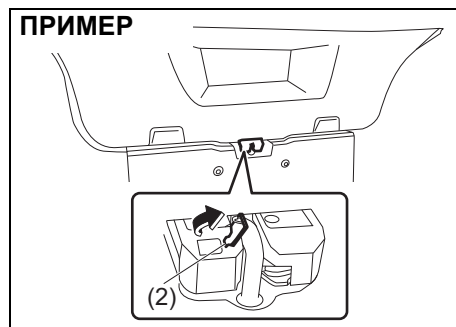


52RM20640

- 2) Open the cover (2) in the lock mechanism of the tailgate.

ЗАБЕЛЕШКА:

Be careful not to lose the cover (2) because it is small and detachable.

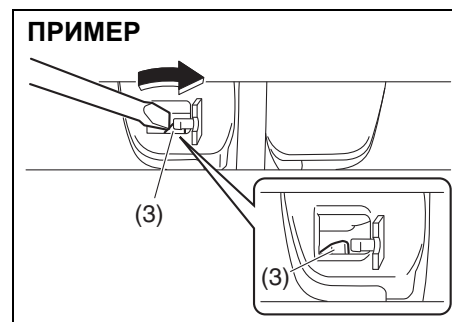

65P30080

- 3) Move the lever (3) in arrow direction by using a flat-bladed screwdriver to unlock the tailgate.
- 4) Push open the tailgate from inside. The tailgate will be latched again by simply closing the tailgate.


If the tailgate cannot be unlatched by pushing the unlatch switch (1), have the vehicle inspected by an authorized SUZUKI dealer.

⚠ ВНИМАНИЕ

Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

Type2

ПРИМЕР

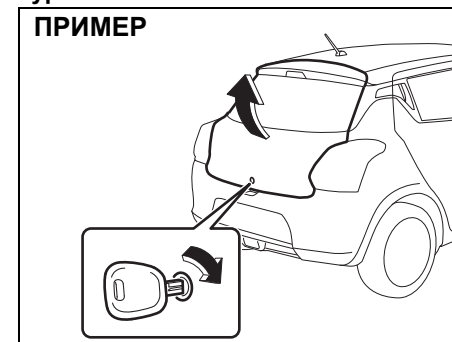

52RM20710


To open the tailgate, insert the key and turn it clockwise to unlatch and lift the tailgate.

ИЗВЕСТУВАЊЕ

Do not use the key to lift up the tailgate, or the key may break off in the lock.

BEFORE DRIVING

Keyless push start system remote controller / Keyless entry system transmitter (if equipped)

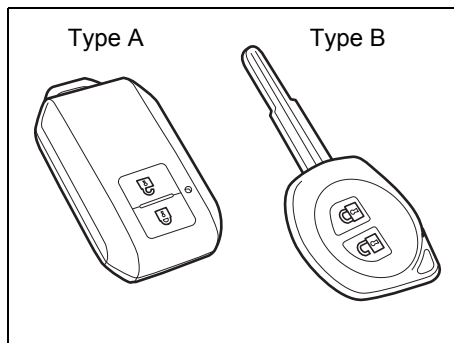

52RM20050

Your vehicle is equipped with either a keyless push start system remote controller (Type A) or a keyless entry system transmitter (Type B). The remote controller has a keyless entry system and a keyless push start system. The transmitter has only a keyless entry system. For details, refer to the following explanations.

⚠ ПРЕДУПРЕДУВАЊЕ


Radio waves from the keyless push start system antenna(s) may interfere with operation of electrical medical equipment such as pacemakers. Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.

- Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from the antenna(s) can interfere with the medical equipment.
- If radio wave interference is a concern, have the function of the antenna(s) disabled by an authorized SUZUKI dealer.

Keyless push start system remote controller (Type A)

The remote controller enables the following operations:

- You can lock or unlock the doors by operating LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch. For details, refer to the explanation in this section.
- You can start the engine without using an ignition key. For details, refer to "Engine switch (vehicle with keyless push start system) (if equipped)" in "OPERATING YOUR VEHICLE" section.

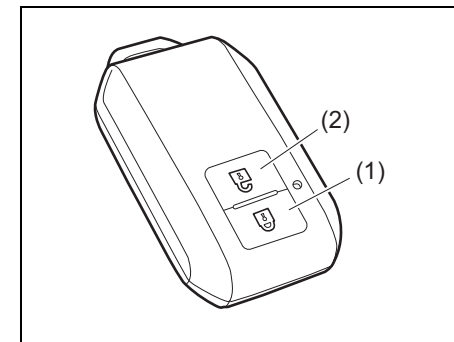

52RM20060

- (1) LOCK button
(2) UNLOCK button

BEFORE DRIVING

There are two ways to lock or unlock all doors (including the tailgate) simultaneously by operating the remote controller near the vehicle.

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

ЗАБЕЛЕШКА:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once and the exterior buzzer will sound once when the doors are locked.

Central door locking system with the dead lock system (if equipped)

To prevent tampering of the door locks, use this method. When the dead lock system is activated, operating the lock knobs will not unlock the side doors.

To activate this system:

To lock all doors, push LOCK button (1) twice within 3 seconds.

To release this system:

- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

ЗАБЕЛЕШКА:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.



ПРЕДУПРЕДУВАЊЕ

Do not activate the dead lock system if there are occupants in the vehicle. They will be locked in the vehicle and cannot unlock the doors from inside.

The turn signal lights will flash once and the exterior buzzer will sound once when the doors are locked, and then the turn signal lights will flash once and the exterior buzzer will sound once again when the doors are locked with the dead lock system.

With the remote controller inside the vehicle, if you push LOCK button on the remote controller, the exterior buzzer will sound and doors cannot be locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the exterior buzzer will sound twice.

- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

ЗАБЕЛЕШКА:


If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.

ЗАБЕЛЕШКА:

- The maximum operating distance of the remote controller is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the remote controller if the ignition mode is in any other mode than "LOCK" (OFF).
- When any door is open, if you push LOCK button on the remote controller, the exterior buzzer will sound and doors cannot be locked.
- If you lose one of the remote controllers, ask an authorized SUZUKI dealer as soon as possible for replacement. Have an authorized SUZUKI dealer program the new remote controller code in your vehicle's memory so that the old code is erased.

BEFORE DRIVING

Keyless unlocking/locking using the request switches

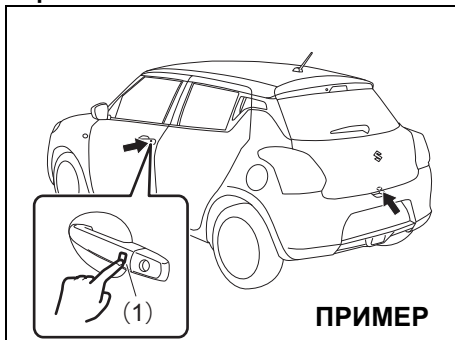

52RM20070

When the remote controller is within the operating range described in this section, you can lock or unlock the doors (including the tailgate) by pushing the request switch (1) on the driver's door handle, front passenger's door handle or tailgate. If you want to prevent tamper-unlocking of the door locks, you can activate the dead lock system.

When all doors are unlocked:

- To lock all doors, push one of the request switches once.
- To lock all doors with the dead lock system, push one of the request switches twice within about 3 seconds.

The turn signal lights will flash once and the exterior buzzer will sound once when the doors are locked, and then the turn signal lights will flash once and the exterior buzzer will sound once again when the doors are locked with the dead lock system.

⚠ ПРЕДУПРЕДУВАЊЕ

Do not activate the dead lock system if there are occupants in the vehicle. They will be locked in the vehicle and cannot unlock the doors from inside.

To unlock a door or all doors:

- Push one of the request switches once to unlock only one door.
- Push one of the request switches twice to unlock all doors.

ЗАБЕЛЕШКА:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

When the doors are unlocked:


- The turn signal lights will flash twice and the exterior buzzer will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this

time, the light will start to fade out immediately.

Check that the doors are locked after you operate the request switch to lock the doors.

ЗАБЕЛЕШКА:

- The door locks cannot be operated by the request switch under the following conditions:
 - If any door is open or is not completely closed.
 - If the ignition mode is in any other mode than "LOCK" (OFF).
- If no doors are opened within about 30 seconds after unlocking the doors by pushing the request switch, the doors will be locked again automatically.

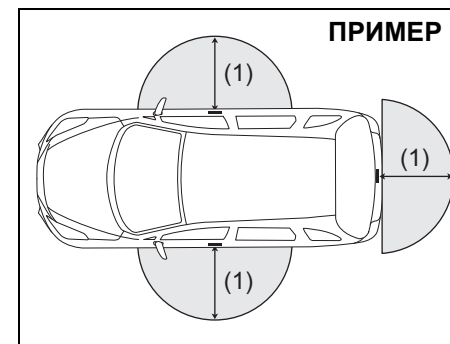

68PH00210

(1) 80 cm (2 1/2 feet)

BEFORE DRIVING

When the remote controller is within approximately 80 cm (2 1/2 feet) from a front door handle or the tailgate switch, you can lock or unlock the doors by pushing the request switch.

ЗАБЕЛЕШКА:

- If the remote controller is outside the request switch operating range described above, you will not be able to operate the request switch.
- If the battery of the remote controller runs down or there are strong radio waves or noise, the request switch operating range may be reduced or the remote controller may be inoperative.
- If the remote controller is too close to the door glass, the request switches may not operate.
- If a spare remote controller is in the vehicle, the request switches may not operate normally.
- The remote controller will only operate a request switch if it is within the switch's operating range. For example, if the remote controller is within the operating range of the driver's door request switch but not the front passenger's door request switch or the tailgate request switch, the driver's door switch can be operated but the front passenger's door switch or tailgate switch cannot be operated.

ИЗВЕСТУВАЊЕ

The remote controller is a sensitive electronic instrument. To avoid damaging the remote controller:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the remote controller away from magnetic objects such as a television.

ЗАБЕЛЕШКА:


The keyless push start system may not function correctly in certain environments or under certain operating conditions such as the following:

- When there are strong signals coming from a television, power station or a cellular phone.
- When the remote controller is in contact with or covered by a metal object.
- When a radio wave type remote keyless entry is used nearby.
- When the remote controller is placed near an electronic device such as personal computer.

Some additional precautions you should take and information you should be aware of are:

- Check that the key is stowed in the remote controller. If the remote controller becomes unusable, you will not be able to lock or unlock the doors.


- Check that the driver always carries the remote controller.
- If you lose one of the remote controllers, ask an authorized SUZUKI dealer as soon as possible for a replacement. Have an authorized SUZUKI dealer program the new remote controller code in your vehicle's memory so that the old code is erased.
- You can use up to four remote controllers and the keys for your vehicle. Ask an authorized SUZUKI dealer for details.
- The battery life of the remote controller is about two years, but it can vary depending on usage conditions.

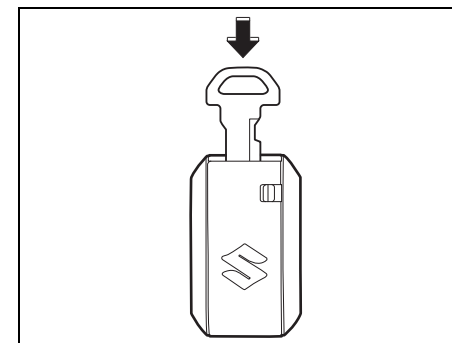

52RM20080

To stow the key into the remote controller, push the key in the remote controller until you hear a click.

BEFORE DRIVING

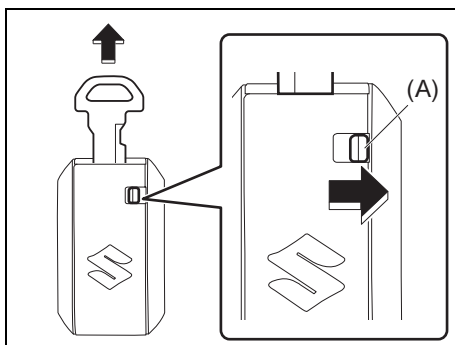

To remove the key from the remote controller, slide the lock knob (A) in arrow direction and pull the key out from the remote controller.

Request switch warning buzzer


The exterior buzzer beeps for about 2 seconds in the following conditions to warn you that the request switch is not working:

- The request switch is pressed after all doors are closed with the ignition mode changed to "ACC" or "ON" by pressing the engine switch.
- The request switch is pressed in any of the following conditions after changing the ignition mode to "LOCK" (OFF) by pressing the engine switch.
 - The remote controller is left inside the vehicle.
 - Any door (including the tailgate) is open.

Press the request switch again after doing the following:

With the ignition mode changed to "LOCK" (OFF) by pressing the engine switch, bring out the remote controller if it is inside the vehicle and check that all doors are completely closed.

Reminder function

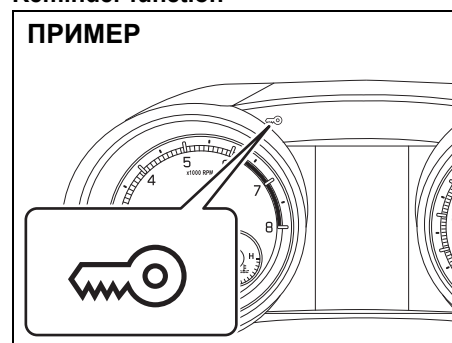

52RM20610

If the remote controller is not in the vehicle under the following conditions, the buzzer sounds intermittently for about 2 seconds and the immobilizer/keyless push start system warning light on the instrument cluster blinks:

When one or more doors are opened and all of the doors are later closed with the ignition in any other mode than "LOCK" (OFF).

The indicator light will turn off within several seconds after the remote controller is returned to an area of the vehicle other than the rear luggage area.

If the remote controller is left in the vehicle and you lock the driver's door or front passenger's door as described below, the door will be automatically unlocked.

- If you open the driver's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the driver's door will be automatically unlocked.
- If you open the front passenger's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the front passenger's door will be automatically unlocked.


ЗАБЕЛЕШКА:

- The reminder will not operate when the remote controller is on the instrument panel, in the glove box, in a storage compartment, in the sun visor or on the floor, etc.
- Check that the driver always carries the remote controller.
- Do not leave the remote controller in the vehicle when leaving the vehicle.

Battery replacement


If the remote controller becomes unusable, replace the battery.

To replace the battery of the remote controller:

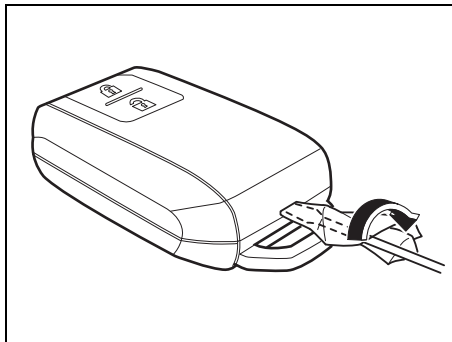

52RM20650

- 1) Insert a flat-bladed screwdriver covered with a soft cloth in the slot of the remote controller and pry it open.

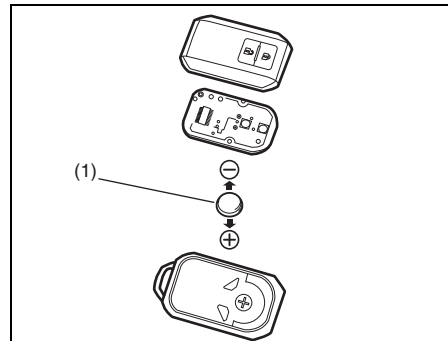

52RM20660

- (1) Lithium disc type battery: CR2032 or equivalent
- 2) Replace the battery (1) so its + terminal faces the bottom of the case as shown in the illustration.
- 3) Close the remote controller firmly.
- 4) Check that the door locks can be operated with the remote controller.
- 5) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

⚠ ПРЕДУПРЕДУВАЊЕ

Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.


ИЗВЕСТУВАЊЕ

- The remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the remote controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

ЗАБЕЛЕШКА:

Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.

BEFORE DRIVING

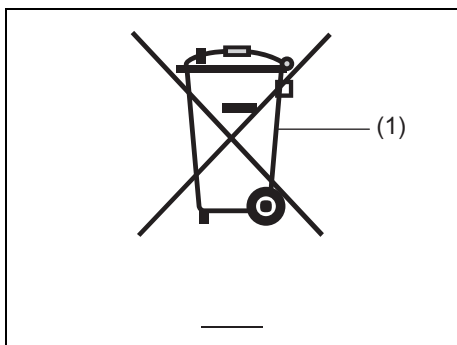

80JM133

(1) Crossed-out wheeled bin symbol


The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult an authorized SUZUKI dealer.

Type A

The keyless push start system, controller model K52RA and key model R53R0 are in compliance with the essential requirements and other provisions of Directive 1999/5/EC.

Keyless entry system transmitter (Type B)

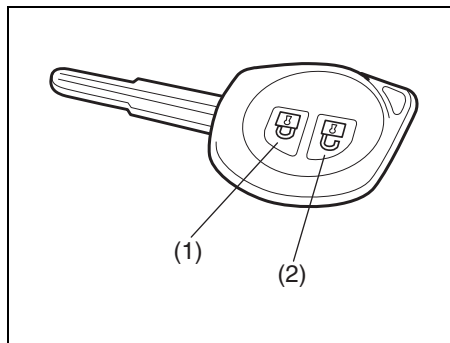

79MH0237

- (1) LOCK button
- (2) UNLOCK button

There are two ways to lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle.

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

ЗАБЕЛЕЖКА:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once when the doors are locked.

Central door locking system with the dead lock system (if equipped)

To prevent tampering of the door locks, use this method. When the dead lock system is activated, operating the lock knobs will not unlock the side doors.

To activate this system:

To lock all doors, push LOCK button (1) twice within 3 seconds.

To release this system:

- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

BEFORE DRIVING

ЗАБЕЛЕШКА:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

⚠ ПРЕДУПРЕДУВАЊЕ

Do not activate the dead lock system if there are occupants in the vehicle. They will be locked in the vehicle and cannot unlock the doors from inside.

The turn signal lights will flash once when the doors are locked, and then the turn signal lights will flash once again when the doors are locked with the dead lock system.

When the doors are unlocked:

- The turn signal lights will flash twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

ЗАБЕЛЕШКА:

If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.

ЗАБЕЛЕШКА:

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can only be unlocked with the transmitter, and the turn signal light will not flash.
- If you lose one of the transmitters, ask an authorized SUZUKI dealer as soon as possible for a replacement. Have an authorized SUZUKI dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

ИЗВЕСТУВАЊЕ


The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Battery replacement

If the transmitter becomes unusable, replace the battery.


To replace the battery of the transmitter:

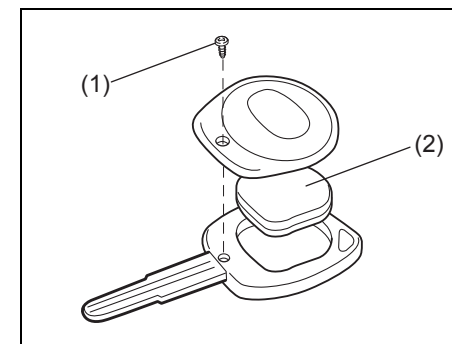

68LM248

- 1) Remove the screw (1), and open the transmitter cover.
- 2) Remove the transmitter (2).

BEFORE DRIVING

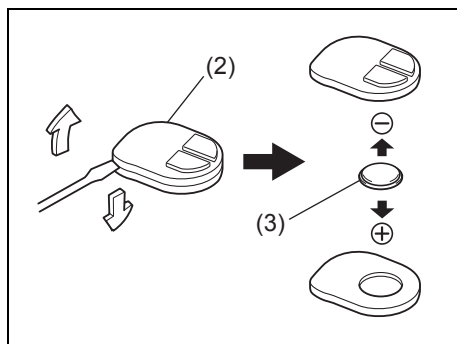

68LM249

(3) Lithium disc type battery:
CR1616 or equivalent

- 3) Put the edge of a flat-bladed screw-driver in the slot of the transmitter (2) and pry it open.
- 4) Replace the battery (3) so its + terminal faces "+" mark of the transmitter.
- 5) Close the transmitter and install it into the transmitter holder.
- 6) Close the transmitter cover, install and tighten the screw (1).
- 7) Check that the door locks can be operated with the transmitter.
- 8) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

⚠ ПРЕДУПРЕДУВАЊЕ


Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

ИЗВЕСТУВАЊЕ

- The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the transmitter controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

ЗАБЕЛЕШКА:

Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.

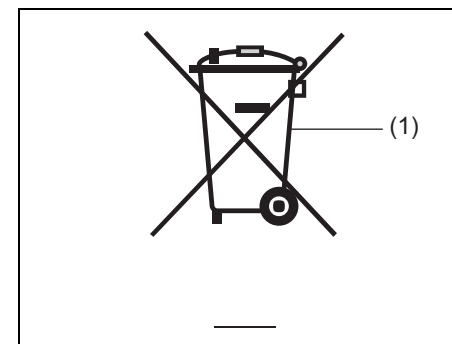

80JM133

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.


By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling of the used battery, consult an authorized SUZUKI dealer.

BEFORE DRIVING

Type B

The keyless entry system, transmitter model T61M0 and controller model K68P2 are in compliance with the essential requirements and other provisions of Directive 1999/5/EC.


Theft deterrent light

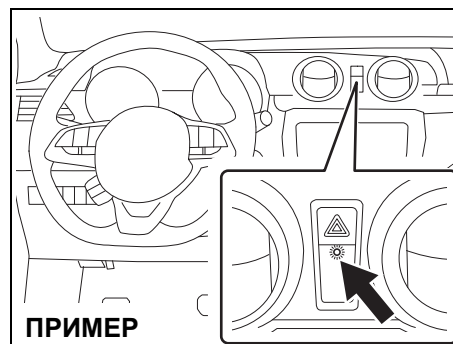

This light will blink with the ignition switch in "LOCK" or "ACC" position, or the ignition mode "LOCK" (OFF) or "ACC". The blinking light is intended to deter theft by leading others to believe that the vehicle is equipped with a security system.

Windows

Manual window control (if equipped)

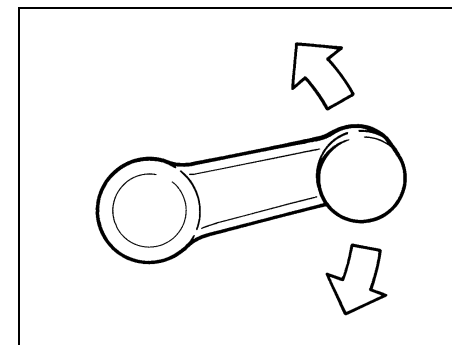

Raise or lower the door windows by turning the handle located on the door panel.


BEFORE DRIVING

Electric window controls

The electric windows can only be operated when the ignition switch is in "ON" position or the ignition mode is "ON".

Driver's side (Type A)


ПРИМЕР

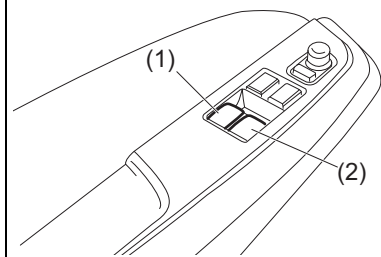

52RM20210

Driver's side (Type B)

ПРИМЕР

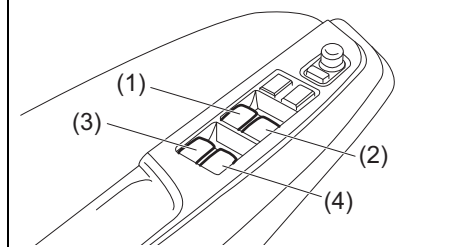


52RM20220

The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (3), (4), to operate the rear left and right passenger windows, respectively.

Passenger's door


ПРИМЕР

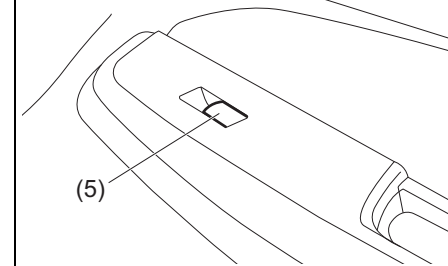

52RM20110

The passenger's door has a switch (5) to operate the passenger's window.

BEFORE DRIVING

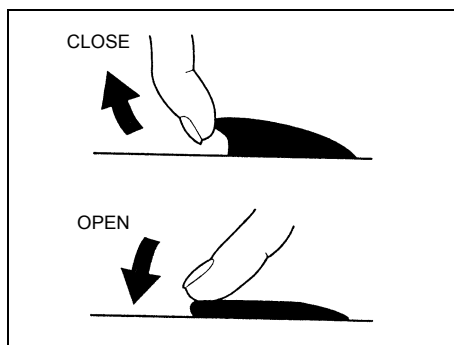


81A009

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

The driver's window has AUTO-DOWN and AUTO-UP (if equipped) features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open or close the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

Lock switch (type A)


EXAMPLE

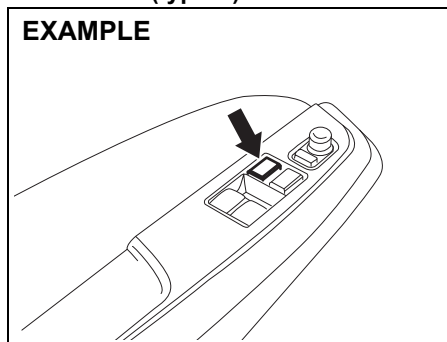

52RM20230

Lock switch (type B)

EXAMPLE

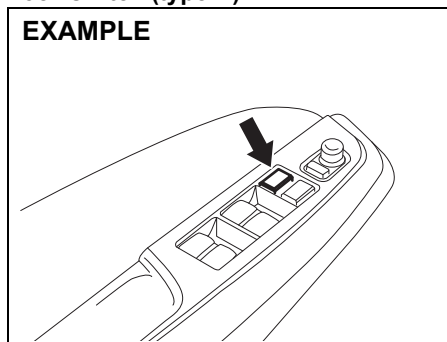

52RM20240

The driver's door also has a lock switch for the passenger's window(s). When you push in the lock switch, the passenger's window(s) cannot be raised or lowered by

operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing it again.

⚠ ПРЕДУПРЕЖДЕНИЕ

- You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.
- To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the electric windows when closing them.
- Always remove the ignition key or take the keyless push start system remote controller with you when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the electric window switches and get trapped by the window.

ЗАБЕЛЕШКА:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

BEFORE DRIVING

Pinching prevention function (if equipped)

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

ПРЕДУПРЕДУВАЊЕ

To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the electric window when closing it. This function may not detect an object due to the size, hardness, or position of the object being caught in the closing window.

ВНИМАНИЕ

- **The pinching prevention function does not operate while you are holding the window switch in UP position.**
- **The pinching prevention function may not detect an object caught in the window just before the window is fully closed.**

ЗАБЕЛЕШКА:

Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position. If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.

Pinching prevention function initialization

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:

- 1) Turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to "ON".
- 2) Open the driver's window fully by holding the window switch in DOWN position.
- 3) Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
- 4) Check the driver's window to see if the AUTO-DOWN/UP feature works.

ПРЕДУПРЕДУВАЊЕ


Whenever you disconnect and reconnect the lead-acid battery or replace the fuse, the pinching prevention function needs to be initialized. The pinching prevention function will not be activated until the initialization is completed.

If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by an authorized SUZUKI dealer.


BEFORE DRIVING

Mirrors

Inside rearview mirror

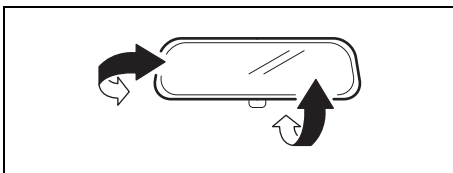

68LMT0205

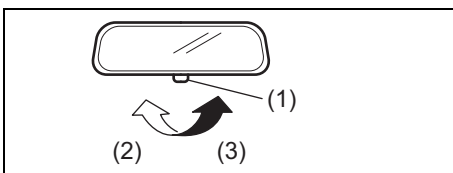

68LMT0206

- (2) Day driving
(3) Night driving

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror. To adjust the mirror, set the selector tab (1) to the day position, and then move the mirror up, down or sideways by hand to obtain the best view.


When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

⚠ ПРЕДУПРЕДУВАЊЕ

- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.

Outside rearview mirrors

ПРИМЕР

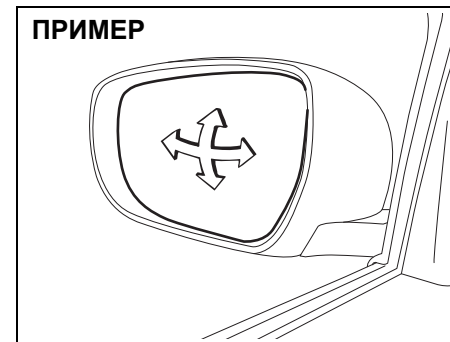

52RM20120


Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

⚠ ПРЕДУПРЕДУВАЊЕ

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

BEFORE DRIVING

Electric mirrors (if equipped)

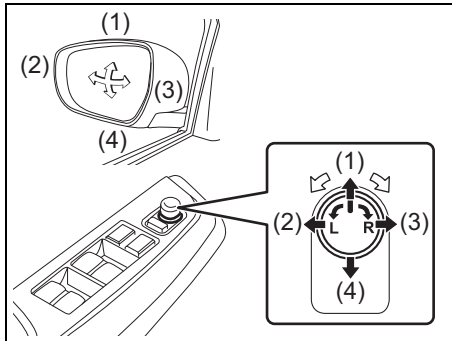

52RM20250


The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position, or the ignition mode is "ACC" or "ON". To adjust the mirrors:

- 1) Rotate the selector switch to the left or right to select the mirror you wish to adjust.
- 2) Push the side of the switch to the direction in which you wish to move the mirror.
- 3) Return the selector switch to the center position to prevent unintended mirror movement.

ЗАБЕЛЕШКА:

If your vehicle is equipped with the heated outside rearview mirrors, refer to "Heated rear window switch / heated outside rear-view mirror switch (if equipped)" in this section.

Outside rearview mirrors folding switch (if equipped)

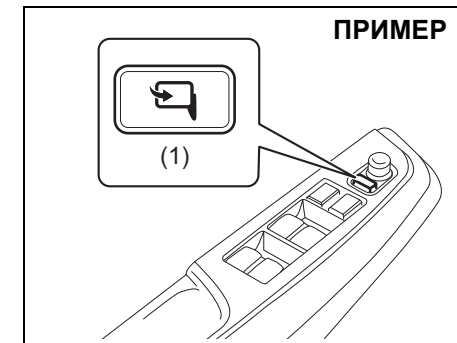

52RM20260

You can fold the mirrors when you park the vehicle in a narrow space. Push the folding switch (1) to fold and unfold the mirrors. Make sure the mirrors are completely unfolded before you start driving.

⚠ ВНИМАНИЕ

Moving mirrors can pinch and injure a hand. Do not allow anyone's hand to get near the mirrors when folding and unfolding the mirrors.

Front seats**Seat adjustment****⚠ ПРЕДУПРЕДУВАЊЕ**

Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Check that the driver's seat and seatback are properly adjusted before you start driving.

⚠ ПРЕДУПРЕДУВАЊЕ

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.

⚠ ПРЕДУПРЕДУВАЊЕ

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.


⚠ ПРЕДУПРЕДУВАЊЕ

Do not place any object under the front seat. If an object becomes caught under the front seat, the following may occur.

- The seat will not be latched.
- The lithium-ion battery, located under the front left side seat in a model equipped with ENG A-STOP system, will be damaged.

BEFORE DRIVING

ПРИМЕР

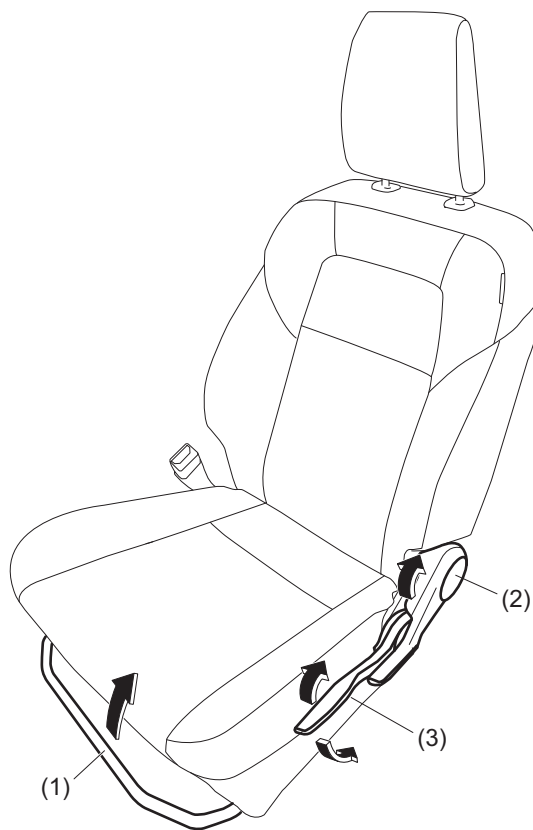

52RM20130

Seat position adjustment lever (1)

Pull the lever up and slide the seat.

Seatback angle adjustment lever (2)

Pull the lever up and move the seatback.


Seat height adjustment lever (3) (if equipped)

Pull the lever up to raise the seat. Push the lever down to lower the seat.

After adjustment, move the seat and seatback back and forth to check if it is securely latched.

BEFORE DRIVING

Head restraints (Adjustable type)

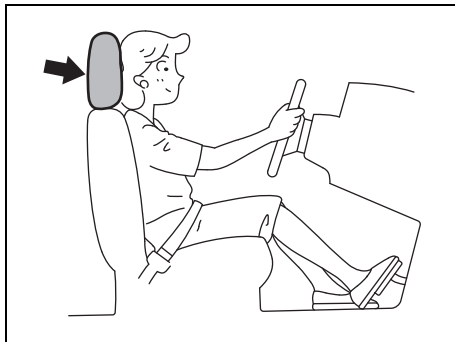

80J001

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

⚠ ПРЕДУПРЕДУВАЊЕ


- **Never drive the vehicle with the head restraints removed.**
- **Do not attempt to adjust the head restraint while driving.**

ЗАБЕЛЕШКА:

It may be necessary to recline the seat-back to provide enough overhead clearance to remove the head restraint.

Front


ПРИМЕР

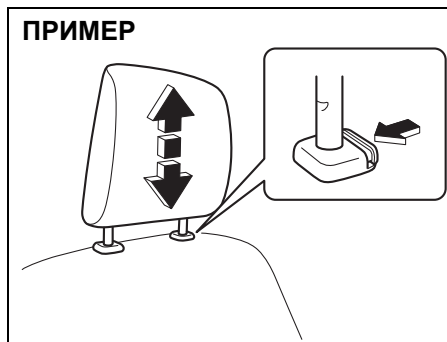

75RM004

To raise the front head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.


Front seat heater (if equipped)

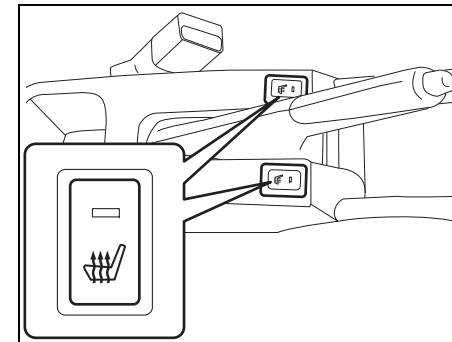

52RM20140

With the ignition switch is in "ON" position or the ignition mode is "ON", push in one or both of the seat heater switch(es) to warm the corresponding seat(s). The indicator light in the switch will also come on. To turn off the seat heater, push in the switch again. The indicator light in the switch will go off.

BEFORE DRIVING

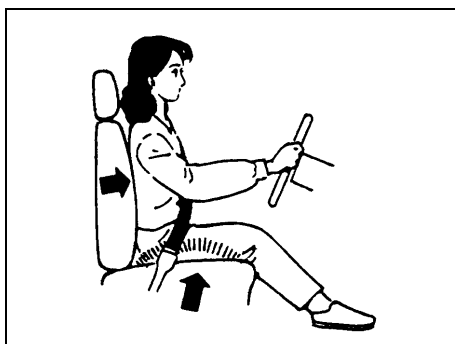

86G064

ПРЕДУПРЕДУВАЊЕ

Improperly using the seat heater can be hazardous. An occupant can suffer burns even if the heating temperature is fairly low, if the occupant is wearing thin pants, a thin skirt or shorts and leaves the heater on for long periods.

Avoid using the seat heater for these occupants:

- People who have reduced feeling in their legs, including the elderly or those with certain disabilities.
- Small children, or anyone with sensitive skin.
- People who are asleep or under the influence of alcohol or other drugs which make them tired.

ИЗВЕСТУВАЊЕ

To avoid damaging the heater element:

- Do not subject the front seats to heavy impacts, such as children jumping on them.
- Do not cover the seat with any insulating materials such as blankets or cushions.

Rear seats

Head restraints (if equipped)

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

ПРЕДУПРЕДУВАЊЕ

- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

ЗАБЕЛЕШКА:


It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.

Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

BEFORE DRIVING

Rear

EXAMPLE

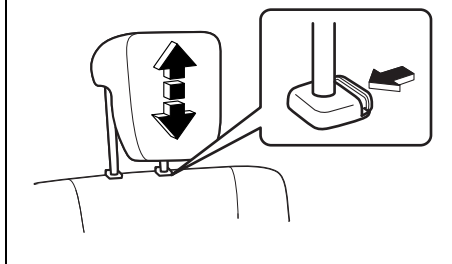

61MM0A033

To raise the rear head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

When installing a child restraint system, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary.


Folding rear seats

The rear seats of your vehicle can be folded forward to provide additional cargo space.

To fold the rear seats forward:

- 1) Lower the head restraint (if equipped) fully.

EXAMPLE

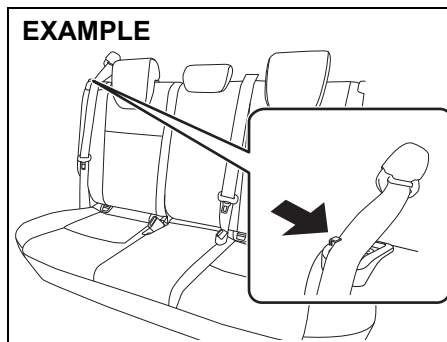


52RM20150

- 2) Hook the webbing of the outboard lap-shoulder belts in the belt hangers.

ИЗВЕСТУВАЊЕ

- When you move a seatback, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.
- Make sure the belt webbing is not twisted.

ПРИМЕР

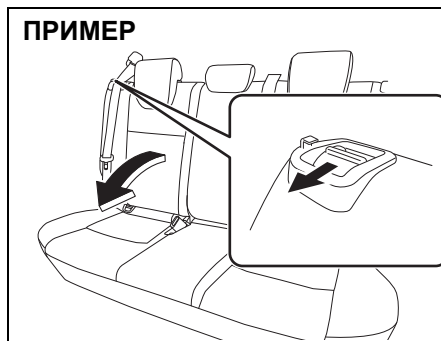

52RM20160

- 3) For the split seat, pull the release lever on the top of each split seat, and fold the seatbacks forward.
For the bench seat, pull the both release levers on the top of the bench seat together, and fold the seatback forward.

BEFORE DRIVING

ИЗВЕСТУВАЊЕ

After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.

⚠ ПРЕДУПРЕДУВАЊЕ

If you need to carry cargo in the passenger compartment with the rear seatback folded forward, secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.


To return the seat to the normal position, follow the procedure below.

⚠ ВНИМАНИЕ

When returning the rear seatback to the normal position, be careful that your finger is not caught between the lock and the striker.

ИЗВЕСТУВАЊЕ

- When returning the rear seatback to the normal position, check that there is nothing around the striker. Any foreign materials prevent the seatback from being locked securely.
- When you move a seatback, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

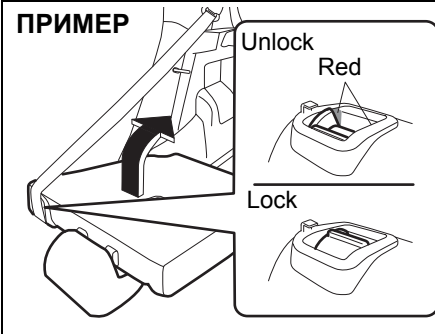

52RM20170

Raise the seatback until it locks into place.

After returning the seat, move the seatback back and forth to check if it is securely latched.

⚠ ВНИМАНИЕ

Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.


⚠ ВНИМАНИЕ

After securing the rear seatback, check that it is locked securely. If it is not, red will appear in the release lever.

ИЗВЕСТУВАЊЕ

- When returning the rear seatback to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback from being locked securely.
- When returning the rear seatback to the normal position, handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.
- As the lock is designed exclusively for securing the rear seatback, do not use it for any other purpose. Incorrect use of it may cause damage to the inside of the lock and prevent the seatback from being locked securely.

Seat belts and child restraint systems

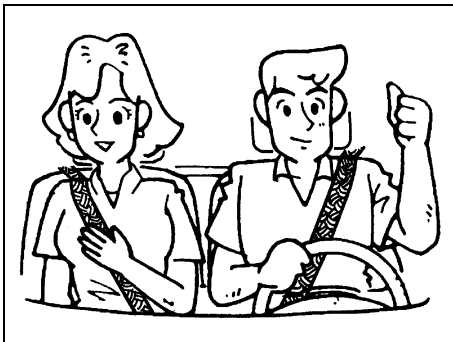


65D231S

⚠ ПРЕДУПРЕДУВАЊЕ

Wear your seat belts at all times.

⚠ ПРЕДУПРЕДУВАЊЕ

An air bag supplements or adds to the frontal crash protection offered by seat belts. The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.

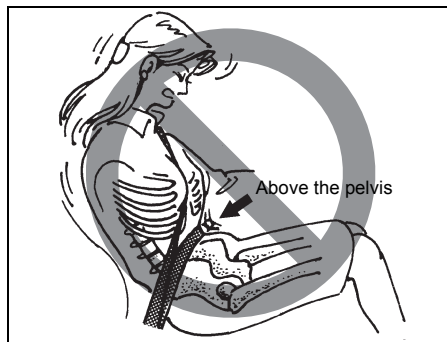


65D606

⚠ ПРЕДУПРЕДУВАЊЕ

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.

(Continued)

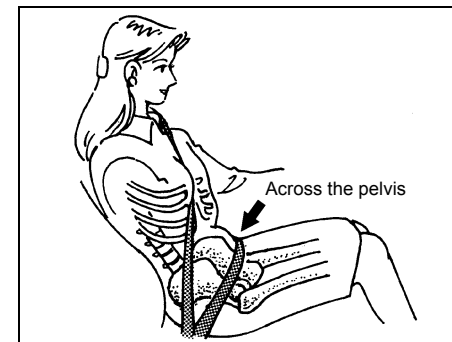

65D201


⚠ ПРЕДУПРЕДУВАЊЕ

(Continued)

- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than a snug belt.
- Check that each seat belt buckle is inserted into the proper buckle catch. It is possible to cross the buckles in the rear seat.

(Continued)

BEFORE DRIVING

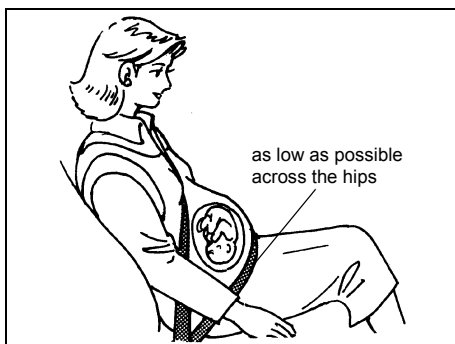

65D199

⚠ ПРЕДУПРЕДУВАЊЕ

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the illustration.
- Do not fasten your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.

(Continued)

⚠ ПРЕДУПРЕДУВАЊЕ

(Continued)

- Never use the same seat belt for more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children aged 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Check that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.

(Continued)

⚠ ПРЕДУПРЕДУВАЊЕ

(Continued)

- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins and clips into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.